



# **SECTION 6**

# **ICEMAKER INFORMATION**



## ICEMAKER SYSTEM INFORMATION

600 Series units utilizes a MidSouth® icemaker, or a Japan-Servo® icemaker, for which the operating characteristics of each are similar.

Icemaker operation is not complex, but its components and operation cycle should be understood by a Service Technician in order to make proper diagnosis.

### ⚠ WARNING

**TO AVOID ELECTRIC SHOCK, ALWAYS DISCONNECT ELECTRICAL POWER TO UNIT WHEN SERVICING ICEMAKER.**

**NOTE:** The ICE ON/OFF key at the control panel activates the icemaker system. If "ICE" is not displayed on the LCD, the icemaker system is off.

**NOTE:** To allow ice to freeze fully and reduce effects of low water pressure, the electronic control disables the icemaker system for 45 minutes after each ice harvest.

**NOTE:** The ice bucket in models 601F-3, 611-3, 611G-3, 650-3 and 650G-3, have a tab at left rear corner that activates a switch when the ice bucket is in place. The ice bucket in the models 685-3 and 695-3 also activates a switch when in place. If the ice bucket is not in proper position on any model, ice production will stop.

**NOTE:** The defrost relay on the control board controls the fill tube heater.

## ICEMAKER COMPONENTS

Following are descriptions that explain the function of each icemaker component. The components are diagramed in Figure 6-1 on the next page.

**Support** - The support is the housing around the electrical components and wire connections. The support is attached to the ice mold.

**Mounting Plate** - The drive motor, holding switch, water valve solenoid switch, timing gear, timing cam and water fill adjusting screw are attached to the metal mounting plate. The mounting plate is then attached to the support.

**Drive Motor** - 115 volts AC supplied to the drive motor causes the motor to operate. The motor has a single output shaft with a small gear. The motor gear drives/spins the timing gear.

**Timing Gear** - The timing gear is driven/spun by the drive motor gear and is attached to the timing cam.

**Timing Cam** - The timing cam is attached to the timing gear and the ice ejector is inserted into the center of the timing cam. As the timing cam rotates, high and low spots on the cam operate the water valve solenoid switch and the holding switch. The timing cam also moves the lever arm side to side and rotates the ice ejector.

**Ice Mold** - The ice mold is where the eight crescent shaped ice cubes are formed.

**Mold Heater** - The mold heater uses 165 watts to thaw the ice free from the mold.

**Ice Ejector** - The drive end of the ice ejector is "D" shaped to fit into the "D" shaped hole in the timing cam. It has eight blades which rotate and sweep the ice from the mold cavities during the ejection phase of the cycle.

**Ice Stripper** - The stripper is attached to the dumping side of the mold, serving as a decorative side cover and it also prevents ice from falling back into the mold.

**Bearing / Inlet** - The bearing / inlet is attached to the ice mold, opposite the support. Water enters the bearing / inlet and is directed to the ice mold. The bearing/inlet also supports the ice ejector at the end opposite the timing cam.

**Thermostat** - The thermostat is a single-pole, single-throw, bi-metal switch. At 15°F (-9°C) ± 3° it closes, starting the ice ejection phase.

**Thermal-Mastic** - A substance similar in appearance to grease that is applied between the thermostat and the ice mold. Its purpose is to increase thermal conductivity between the mold and the thermostat.


**Lever Arm and Shut-off Arm** - The lever arm is moved side to side by two revolutions of the timing cam. As it moves, it raises and lowers the shut-off arm and operates the shut-off switch to control the quantity of ice production. If the shut-off arm comes to rest on top of the ice in the storage bin during either revolution, the shut-off switch will remain open, stopping ice production at the end of that revolution.

**Water Valve Solenoid Switch** - A single-pole, double-throw type switch that allows electricity to the water valve solenoid, opening the valve, during the fill cycle.

**Holding Switch** - A single-pole, double-throw type switch that assures completion of a revolution once the icemaker has been energized.

**Shut-off Switch** - A single-pole, double-throw type switch that stops ice production when the ice bin is full.

**TCO (Thermal Cut Out)** - The TCO is thermal protection device in the wire harness that would open in the event of mechanical failure, thus protecting against over heating. (The TCO is not shown in diagram.)

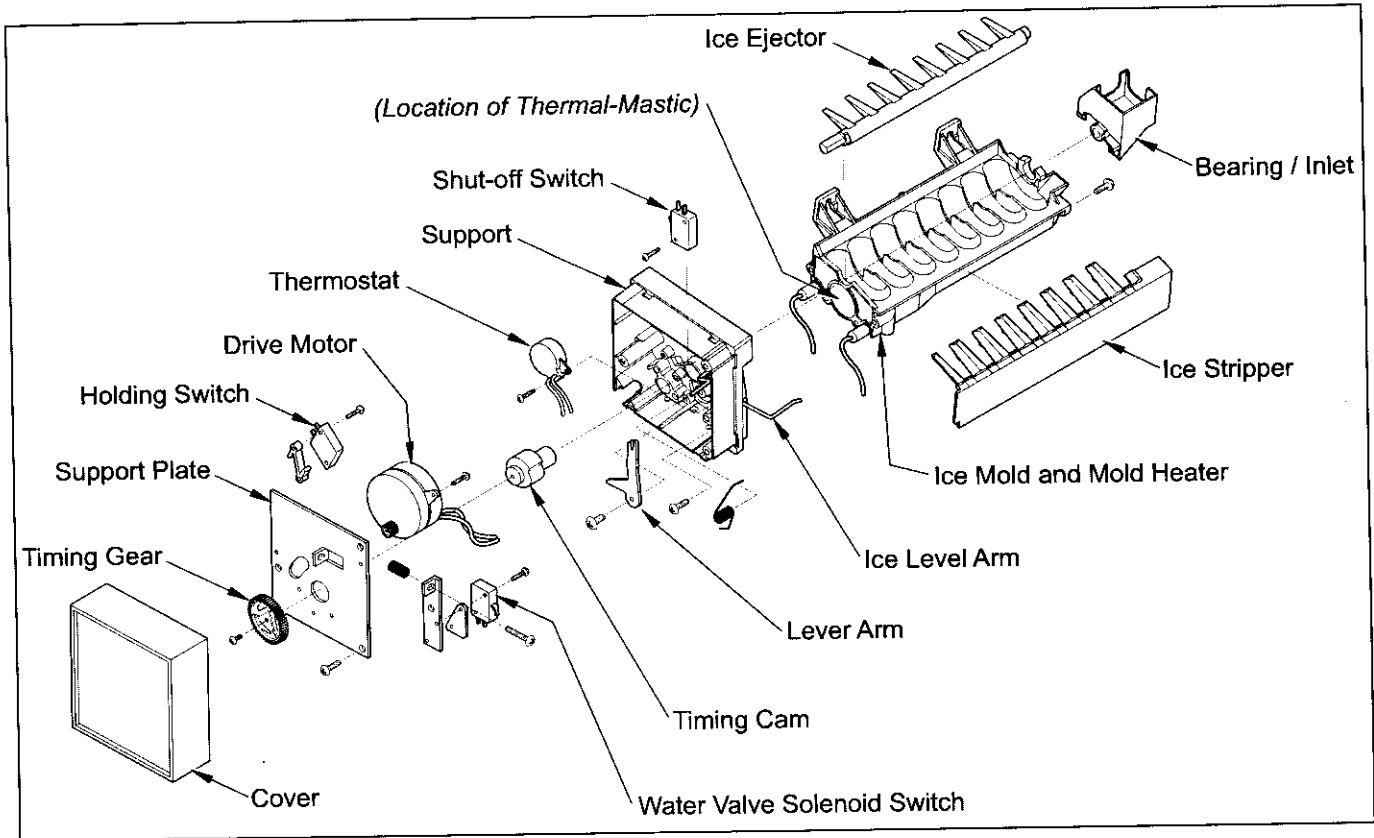


**Figure 6-1. Diagram of Icemaker Components**

**ICEMAKER OPERATION**

The following series of electrical schematics illustrate a typical icemaker cycle of operation. Below each schematic is a diagram indicating the approximate location of the ice ejector and ice level arm during the phase the schematic indicates.

**Freeze Phase of Ice Making Cycle (See Figure 6-2)**

- The ice mold is filled with water.
- The thermostat is open.
- No icemaker components are energized.

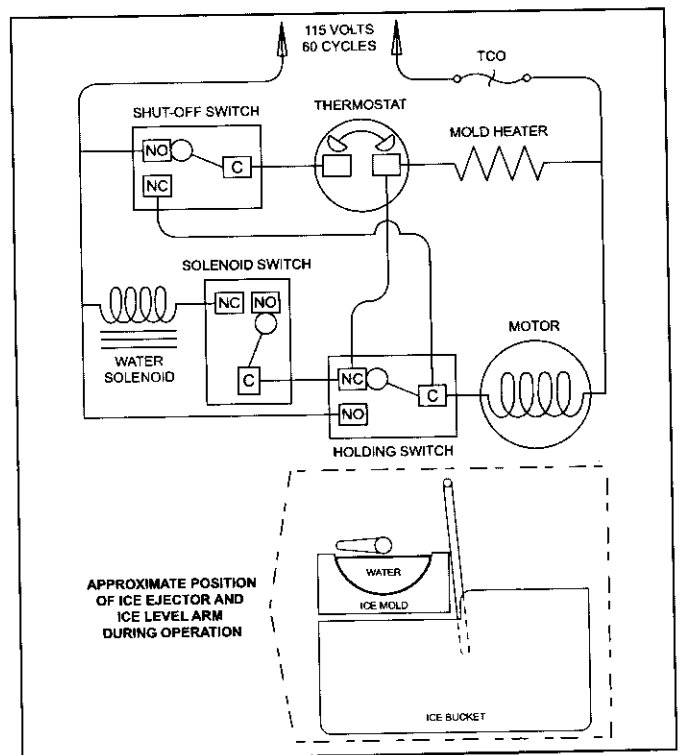

**Figure 6-2. The Freeze Phase**

**Start of the First Revolution (See Figure 6-3)**

- The water in the ice mold has turned to ice.
- At 15°F (-9°C) ± 3° the thermostat closes.
- The mold heater is energized through the thermostat.
- The drive motor is started through the thermostat and "normally closed" terminal of the holding switch.
- The ice ejector begins to turn and the shut-off arm begins to rise.

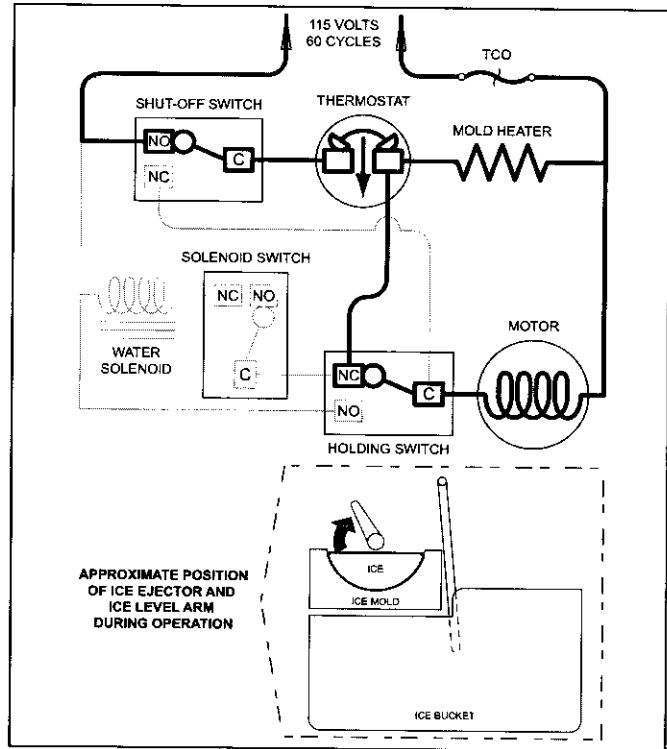


Figure 6-3. Start of First Revolution

**First Revolution Continued (See Figure 6-4)**

- The holding switch is tripped by the timing cam to "normally open" thus holding power to the motor.
- The mold heater remains energized through the thermostat.
- The shut-off arm begins to rise.

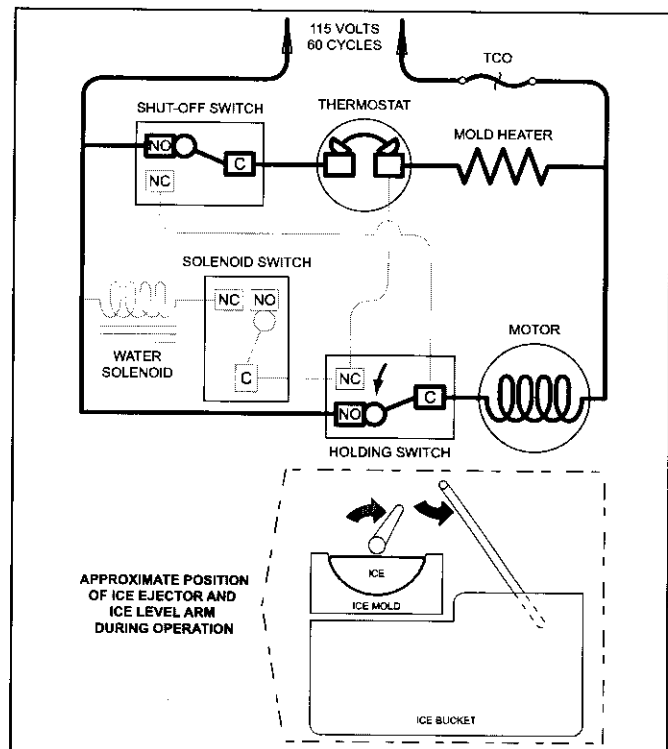


Figure 6-4. First Revolution Continued

### First Revolution Continued (See Figure 6-5)

- The ice ejector reach the ice in the mold.
- The ice releases from the mold as the ejector blades begin to rotate the cubes out.
- The drive motor remains energized through the holding switch.
- The mold heater remains energized through the thermostat.
- As the shut-off arm rises, the shut off switch is tripped to "normally closed", and then the shut-off arm begins to lower.

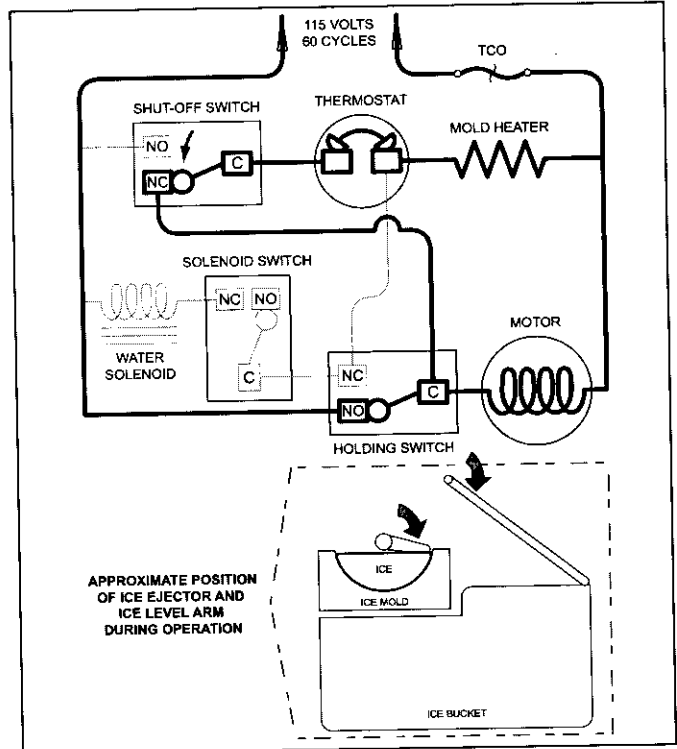


Figure 6-5. First Revolution Continued

### First Revolution Continued (See Figure 6-6)

- The ice has released from the mold.
- The motor remains energized through the holding switch.
- The shut-off arm is lowered and the shut off switch is tripped to "normally open".
- The water valve solenoid switch is tripped by the timing cam, but the solenoid is not energized because the thermostat is still closed and energizing the mold heater. (Electric current follows the path of least resistance.)

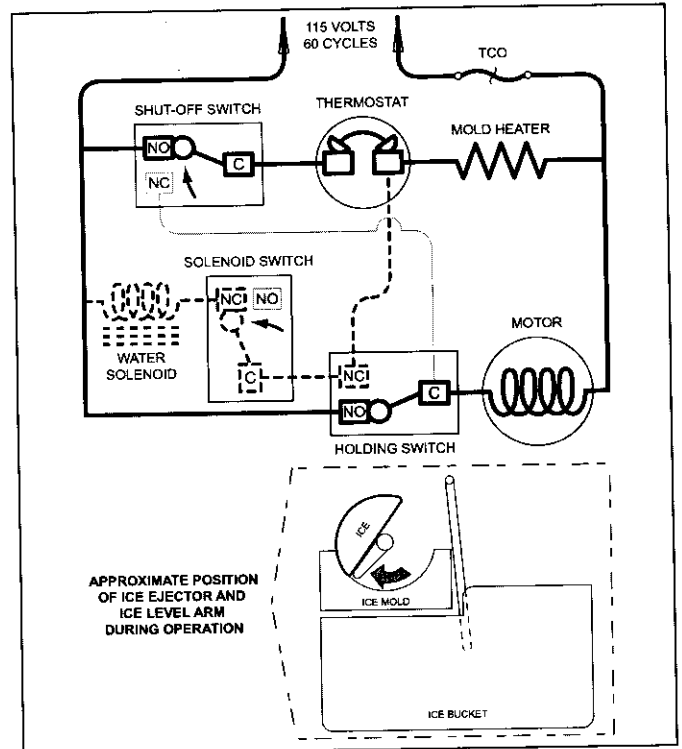


Figure 6-6. First Revolution Continued

**End of First Revolution (See Figure 6-7)**

- The water valve solenoid switch is tripped by the timing cam back to “normally open.”
- The timing cam trips the holding switch to “normally close,” which ends the first revolution, but the thermostat is still closed, so the motor is again started.
- The mold heater remains energized through the thermostat.

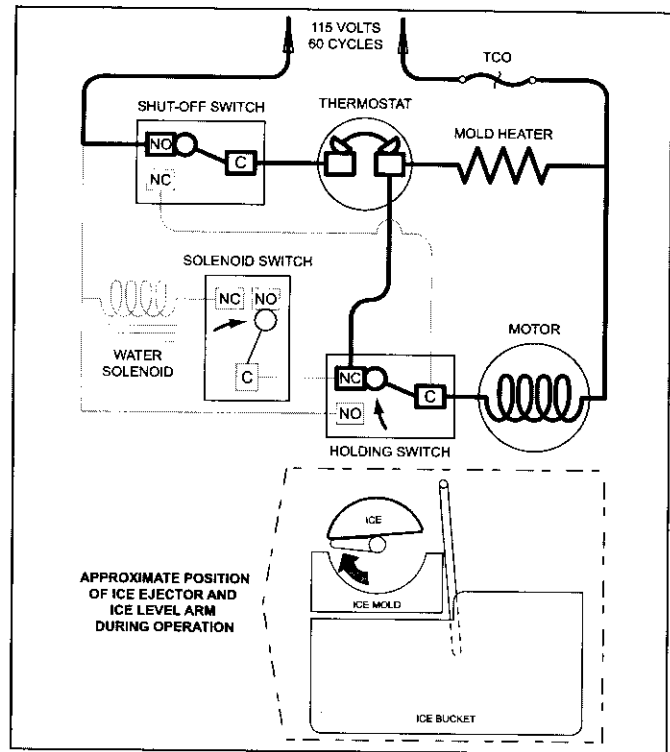


Figure 6-7. End of First Revolution

**Start of Second Revolution:(See Figure 6-8)**

- The water valve solenoid switch is tripped by the timing cam back to “normally open.”
- The timing cam trips the holding switch to “normally close,” which ends the first revolution, but the thermostat is still closed, so the motor is again started.
- The mold heater remains energized through the thermostat.


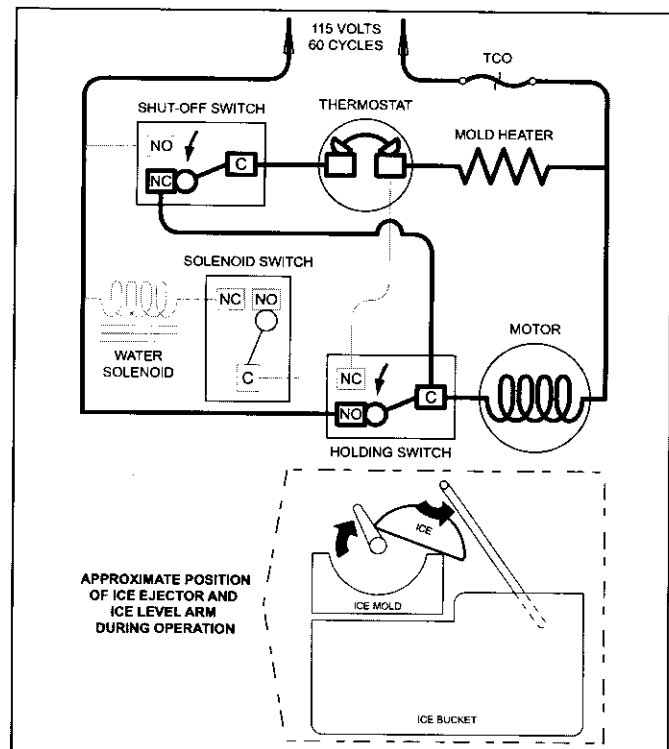


Figure 6-8. Start of Second Revolution

**Second Revolution Continued (See Figure 6-9)**


- The mold heater has warmed the thermostat, so the thermostat opens, and the mold heater is de-energized.
- If the shut-off arm comes to rest on top of the ice in the storage bin (as illustrated), so the shut-off switch will remain in the “normally closed” position.
- The motor remains energized through the holding switch.

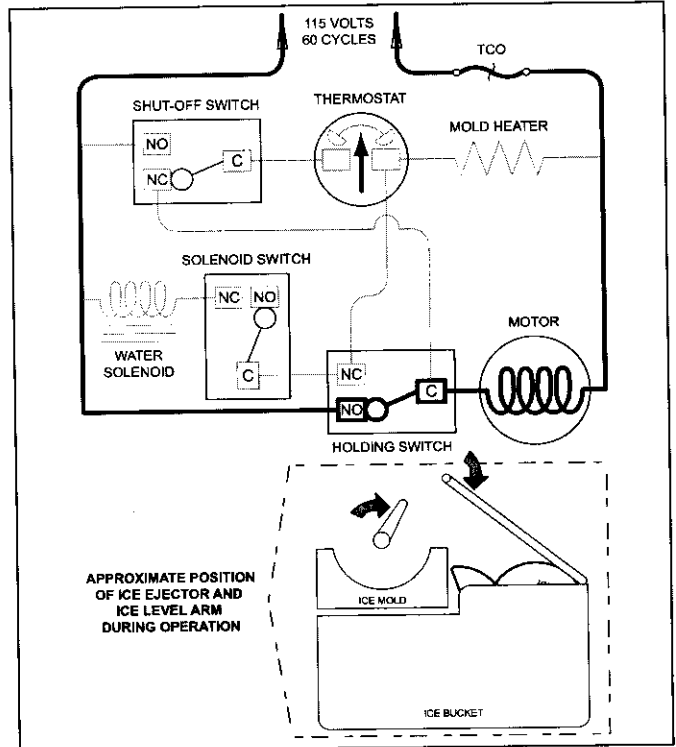

**Figure 6-9. Second Revolution Continued**

**Second Revolution Continued (See Figure 6-10)**

- The water valve solenoid switch is tripped by the timing cam. This time the solenoid is energized because the thermostat is open. The water solenoid is open for approximately seven seconds, filling the ice mold with water.
- the mold heater is energized through the solenoid switch and holding switch.

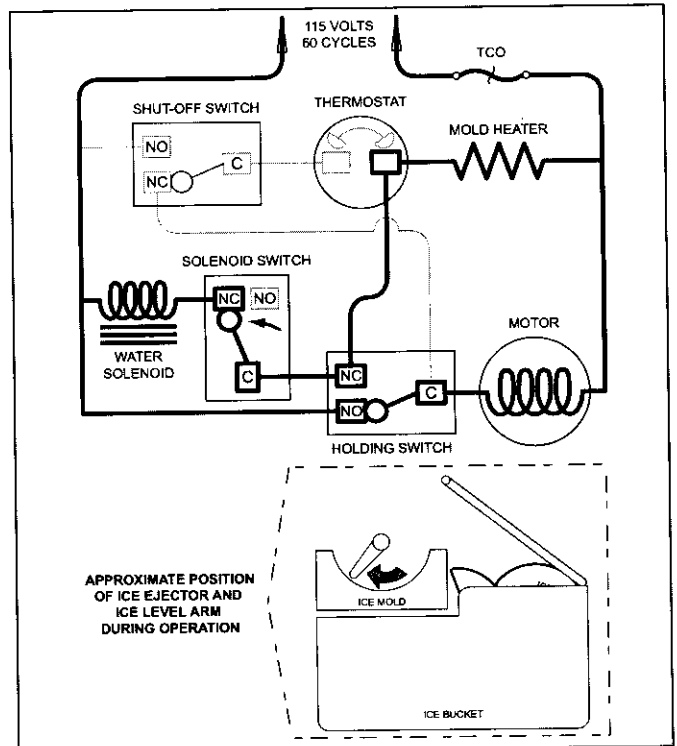


**Figure 6-10. Second Revolution Continued**

**End of Ice making Cycle (See Figure 6-11)**

- The water valve solenoid switch is tripped by the timing cam back to “normally open” ending the water fill.
- The timing cam trips the holding switch to “normally close,” which ends the second revolution.
- The thermostat is still open, so it does not start the drive motor.
- If the shut-off arm has come to rest on top of the ice in the storage bin (as illustrated), the shut-off switch remains in the “normally closed” position. This interrupts power from reaching the thermostat, until sufficient ice has been removed from the storage bin allowing the shut-off arm to lower.

**NOTE:** To allow ice to freeze fully and reduce effects of low water pressure, the electronic control system disables the icemaker system for 45 minutes after each ice harvest.

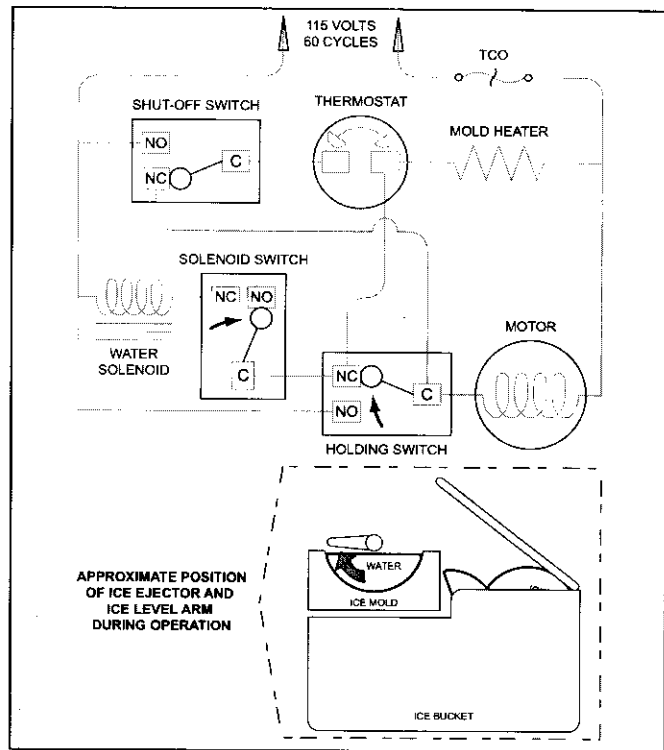


**Figure 6-11. End of Ice Making Cycle**

**MANUALLY STOPPING ICE PRODUCTION**

Ice production can be manually stopped three ways:

1. Press the ICE ON/OFF key on the control panel so that “ICE” is not displayed on the LCD.
2. Remove ice bucket so that icemaker switch behind the ice bucket is not being depressed. Also, make sure no food product is coming in contact with icemaker switch.
3. Position the ice-level/shut-off arm in the up/OFF position (See Figure 6-12).

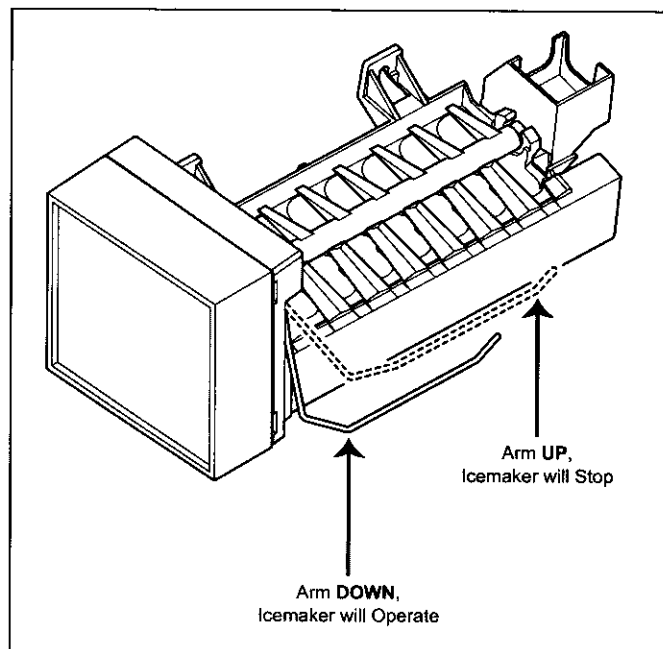

**Figure 6-12. Stopping Icemaker**



### MANUALLY STARTING THE ICEMAKER

**NOTE:** To allow ice to freeze fully and reduce effects of low water pressure, the electronic control disables the icemaker system for 45 minutes after each ice harvest. To bypass this 45 minute dwell for service purposes, press the the ICE ON/OFF key at the control panel.

#### Manual Start Procedure:

1. Pry the icemaker front cover from the support using a flat-blade screwdriver or coin.
2. With a flat-blade screwdriver, turn the drive gear counterclockwise until the holding switch is activated, completing the circuit to the drive motor (this will be about a 1/8 turn). (See Figure 6-13) The icemaker will then complete its cycle automatically.

**NOTE:** If after 1/4 turn the icemaker is not running on its own, it may be in the 45 minute dwell period or there is an electrical or mechanical problem.

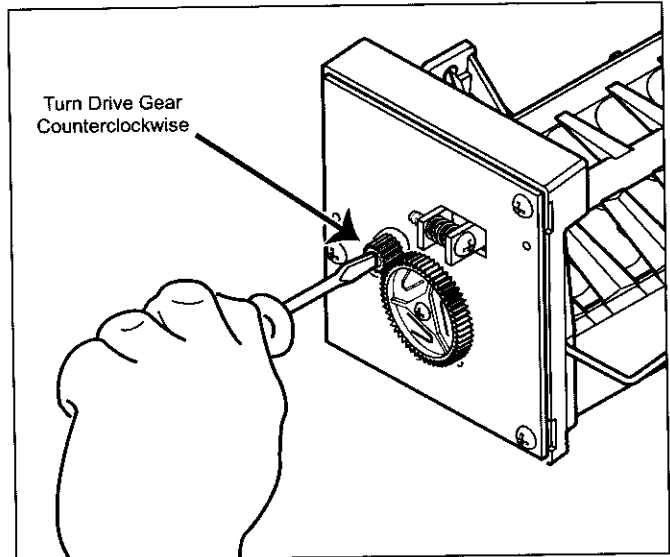


Figure 6-13. Manually Start Icemaker

### ADJUSTING ICEMAKER WATER FILL LEVEL

Proper water fill level for a MidSouth icemaker is 100 - 110 cc's (3.5 - 3.75 oz). If the fill level is checked and needs to be adjusted, turn the water fill adjusting screw clockwise to reduce fill level, or counterclockwise to increase fill level. One full turn of the screw equals 15 cc's. (See Figure 6-14)

**NOTE:** Always check fill level before making any adjustments of the water fill adjusting screw.

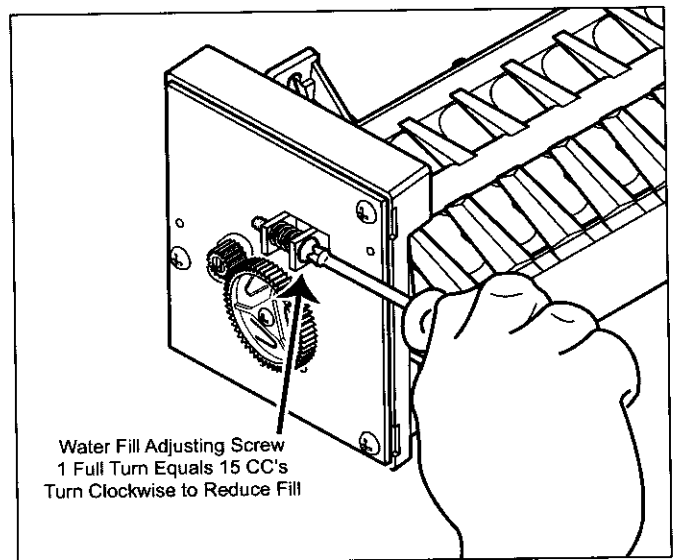


Figure 6-14. Adjust Water Fill Level